

### **Reset Instructions for the M100**

- Please remove the cash box and press either SW2 or SW3 as shown on the diagram in your instructions. The display will now show 'PRIVATE MODE'.
- Now press SW1 which again is shown on the diagram on your instructions and the display will then show 'CREDIT'.
- Now make sure there is credit on the meter, if not then press and hold SW3 to display some credit (does not matter how much). Once you have done this press and hold SW2 to zero the credit and when you have reached zero press SW3 to increase the credit.
- After 30 seconds or so the meter will come out of private mode and should now be ready for operation.

Please note that once you are in 'PRIVATE MODE' the meter will revert back to its default display if the switches (SW1, SW2 and SW3) are not operated for a length of time in which case you will have to start at the very beginning.